


Heat Alarm

Installation and maintenance



ALWAYS read the **ENTIRE** user manual and keep it in a safe place!
ALWAYS install your alarms in accordance with user manual.
ALWAYS make sure you understand the lights and sounds.
INTERLINK to other smoke alarms and heat alarms if possible.

1 CHOICE AND LOCATION OF ALARMS

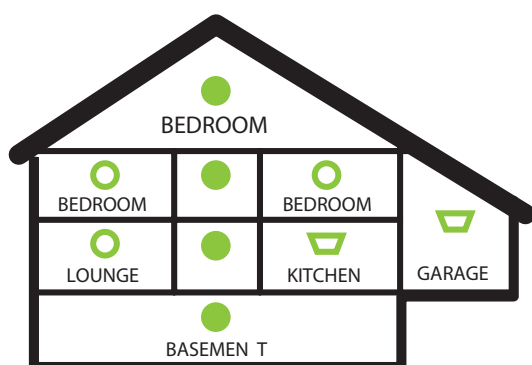


- SMOKE ALARMS FOR MINIMUM PROTECTION
- SMOKE ALARMS FOR INCREASED PROTECTION
- ▤ HEAT ALARMS

● **OPTICAL SMOKE ALARMS** are suitable for sensing smouldering fires in escape routes, lounges and bedrooms which may contain furniture, bedding and clothes.

▤ **HEAT ALARMS** are most suitable for kitchens, boiler rooms, workshops and garages where dust, dirt and moisture would contribute to nuisance alarms.


NOTE: Heat alarms should not be used in escape routes and it is recommended they are interlinked to smoke alarms. Do not install heat alarms on walls or in bedrooms, nurseries, playrooms or areas where the elderly and disabled may spend long periods of time.

2 ALARM POSITIONING

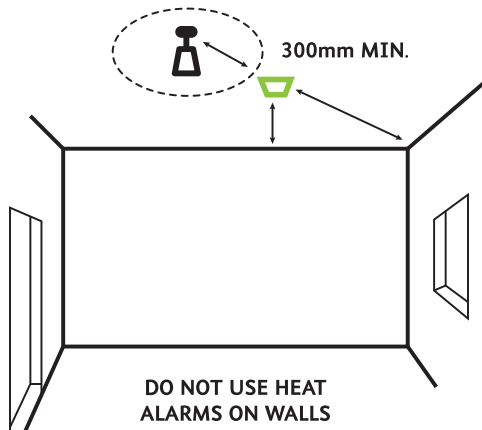

HEAT ALARM

Position of alarms
on apex ceilings:

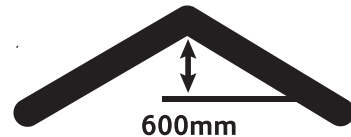

3 HEAT ALARM LOCATION

HEAT ALARMS

REMEMBER, heat alarms need a fire to activate, flames **WILL** be present.

Do NOT install on walls

Do NOT use in escape routes

If a heat alarm has an interlink facility it should be connected with an interlinkable smoke alarm

Do NOT use in lounges, bedrooms and separate dining rooms where smoke alarms are best

AVOID use in areas where children, the elderly and disabled are normally present

DESIGNED for kitchens, garages, cellars, attics where steam, vapours, dust, and cobwebs may cause nuisance alarms from smoke alarms

KEEP 300mm AWAY from lights and appliances that generate heat. (Tungsten and low voltage bulbs) (Sensor temperature range 54°C – 65°C)

KEEP AWAY from objects that could divert or prevent smoke and heat from reaching them, ie beams and other ceiling features.

KEEP AWAY from extractor fans

4 MAINTAIN YOUR ALARM

Test once a week



Wipe with damp cloth
every six months



Vacuum with a soft
brush every six months

